

Remote controls for SHOT-302GS/304GS, SHOT-702, PGC-04-U, and HSC-103.

JS-300



 Enables manual operation of attached motorized stages using a joystick.

Specifications		
Part Number	JS-300	
Туре	Button operation	
Cable	MDR14-CA-2.5 (purchase separately)	
Display	LCD (16 digits × 4 lines)	
External Dimensions [W×H×Dmm]	120×50×160	
Weight [kg]	0.7	

Application Systems

Optics & Optical Coatings

Opto-Mechanics

Bases

Manual Stages

Actuators & Adjusters

Motoeized tages

Softwares **Stepping Motor** AC Servo Motor

Cables

Piezo

X Translation **Theta Rotation** Goniometer Vacuum

Functions		Motoeized Stages
LCD Panel	Display digits: 16 digits × 4 lines	
MODE Button	Switches modes (SHOT-302GS/SHOT-304GS)	Light Sources &
E-ORG Button	Returns to theoretical (electric) origin	Laser Safety
ZERO Button	Sets theoretical (electric) origin	
Control Axis Switch Button	Switches the operating axis of joystick (1, 2 or 3, 4 axes)	Index
Joystick	Joystick Controls 1, 2 or 3, 4 axes	
M-ORG Button	Machine Origin Return	
Third axis Operating Switch	Operates third axis	
SPEED Button	A button to select one of the four motion speeds set by the controller.	Guide
STOP Button	Emergency stop	Controllers/Drivers

JB-400



- Enables manual operation of attached motorized stages using a keypad.
- Can be used to edit setup parameters and internal programs when connected to SHOT-302GS or SHOT-304GS.

Specifications		
Part Number	JB-400	
Туре	Button operation	
Cable	MDR14-CA-2.5 (purchase separately)	
Display	LCD (16 digits × 4 lines)	
External Dimensions [W×H×Dmm]	178×38×195	
Weight [kg]	0.7	

Functions				Options
LCD Panel	Display digits: 16 digits × 4 lines			
Program Button	Execution of internal program (exclude SHOT-702)			40 × 40 mm
SPEED Button	A button to select one of the four motion speeds set by the controller.			$40 \times 40 \text{ mm}$
MODE Button	Switches between SHOT-302GS/SHOT-304GS models			80 × 80 mm
ORG X/Y Button	Returns X/Y axis to machine origin			85 x 85 mm
Reset X/Y Button	Sets theoretical (electric) origin of X/Y axis			$100 \times 100 \text{ mm}$
STOP Button	Emergency stop			$120 \times 120 \text{ mm}$
JOG/Pulse Button	Switches between JOG operation and fixed pulse operation			
X axis / Y axis Control Button	When set to JOG operation: Move while the button is being pressed	When set to fixed pulse operation: Move for the registered number of pulses at each press of the button		Others
CLEAR Button	Resets the fixed pulse setting to zero			
Numeric Keypad (0 – 9)	Inputs the number of fixed pulse			
SET Button	Completes setting of fixed pulse			

